

# AXAGON

## INSTRUCTIONS FOR USE

(original)  
revision 1.0

### HUE-M1C

## 4 PORT SUPERSPEED USB-C MINI HUB

<b>ENG</b> Instructions for use (original)	<b>NL</b> Instructies voor gebruik (vertaling)
<b>CZ</b> Návod k použití (originální)	<b>PL</b> Instrukcja użycia (tłumaczenie)
<b>DE</b> Gebrauchsanweisungen (Übersetzung)	<b>PT</b> Instruções de utilização (translação)
<b>DK</b> Brugsanvisning (translation)	<b>RO</b> Instrucțiuni pentru utilizare (traducere)
<b>ESP</b> Instrucciones de uso (traducción)	<b>RU</b> Инструкция по эксплуатации (транслация)
<b>FIN</b> Käyttöohjeet (käänös)	<b>SK</b> Návod na použitie (preklad)
<b>FR</b> Instructions d'utilisation (traduction)	<b>SWE</b> Användarinstruktioner (translation)
<b>GR</b> Οδηγίες χρήσης (μετάφραση)	<b>TR</b> Kullanım talimatları (tercüme)
<b>HR</b> Upute za korištenje (prijevod)	<b>BG</b> Инструкции за Употреба (превод)
<b>HU</b> Felhasználói kézikönyv (fordítás)	<b>CN</b> 使用说明(翻译)
<b>IT</b> Istruzioni per l'uso. (traduzione)	<b>ARA</b> تعليمات الاستخدام (الترجمة)



**ENG** Four-port SuperSpeed USB hub  
**CZ** Čtyř-portový SuperSpeed USB rozbočovač  
**DE** SuperSpeed USB-Hub mit vier Anschlüssen  
**DK** Fire-port SuperSpeed USB-hub  
**ESP** Cuatro puertos Hub SuperSpeed USB  
**FIN** Neliväyläinen SuperSpeed USB-keskitin  
**FR** Hub SuperSpeed USB à quatre ports  
**GR** θύρα hub τεσσάρων θέσεων SuperSpeed USB  
**HR** SuperSpeed USB hub s četiri priključka  
**HU** Négy csatlófelületes SuperSpeed USB hub  
**IT** Hub SuperSpeed USB a quattro porte  
**NL** SuperSpeed USB-hub met vier poorten  
**PL** Czteroportowy hub SuperSpeed USB  
**PT** Hub SuperSpeed USB de quatro portas  
**RO** Patru porturi hub SuperSpeed USB  
**RU** SuperSpeed USB-концентратор с четырьмя портами  
**SK** Štvorportový SuperSpeed USB rozbočovač  
**SWE** Fyra-utgångars SuperSpeed USB hub  
**TR** Dört bağlantı noktalı SuperSpeed USB hub  
**BG** SuperSpeed USB хъб с четири порта  
**CN** 具有四个端口的SuperSpeed USB集线器  
**ARA** مع أربعة منافذ SuperSpeed USB موزع

EN	CZ	DE	DK	ESP	FIN	FR	GR	HR	HU	IT	NL	PL	PT	RO
1. Turn on computer.	1. Zapněte počítač.	1. Schalten Sie den Rechner ein.	1. Tænd for computeren.	1. Encienda el ordenador.	1. Kytke tietokone päälle.	1. Allumez l'ordinateur.	1. Anoiíte τον υπολογιστή.	1. Upalite računalo.	1. Kapcsolja be a számítógépet.	1. Accendete il computer.	1. Schakel de computer in.	1. Proszę włączyć komputer.	1. Ligue o computador.	1. Porniți PC-ul.
2. Connect the hub to the PC USB port.	2. Připojte hub k USB portu PC.	2. Schließen Sie den Hub an den USB-Anschluss des PCs an.	2. Forbind hubben til Pc'ens USB port.	2. Conecte el hub al puerto USB de la PC.	2. Kytke keskitin tietokoneen USB-väylään.	2. Connectez le hub au port USB du PC.	2. Συνδέστε το καλώδιο USB στη θύρα USB του υπολογιστή.	2. Priključite hub na USB priključak računala.	2. Csatlakoztassa az hub-ot a PC USB portjához.	2. Collegare l'hub alla porta USB del PC.	2. Sluit de hub aan op de USB poort van de PC.	2. Podłącz hub do portu USB komputera PC.	2. Conecte o hub à porta USB do PC.	2. Conectați hub-ul la portul USB al PC-ului.
3. An automatic installation will be performed. No need to install any external drivers.	3. Proběhne automatická instalace. Nejsou potřeba žádné externí ovladače.	3. Es erfolgt eine automatische Installation. Es sind keine externen Treiber notwendig.	3. En automatisk installation vil blive udført. Du behøver ikke installere eksterne drivere.	3. Se procede a la instalación automática. No es necesario instalar externos adicionales.	3. Automaattinen asennus suoritetaan. Ulkoisia ajureita ei tarvitse asentaa.	3. L'installation aura automatiquement lieu. Aucun pilote externe n'est nécessaire.	3. Θα εκτελεστεί μια αυτόματη εγκατάσταση. Δεν χρειάζεται να εγκαταστήσετε εξωτερικούς.	3. Plzvršit će se automatska instalacija. Nije potrebno instalirati dodatne upravljačke programe.	3. Végbemegy az automatikus telepítés. Nem szükséges semmilyen külső vezérlő.	3. Ha luogo l'installazione automatica. Non è necessario nessun driver esterno.	3. Er wordt een automatische installatie uitgevoerd. U hoeft geen externe stuurprogramma 's te installeren.	3. Urządzenie zostanie zainstalowane automatycznie. Nie są potrzebne żadne sterowniki zewnętrzne.	3. Será executada uma instalação automática. Não há necessidade de instalar drivers externos.	3. Rulează instalarea automată. Nu sunt necesare niciun fel de drivere externe.
4. The hub is ready.	4. Hub je připraven.	4. Der Hub ist bereit.	4. Hubben er klar.	4. El hub está listo.	4. Keskitin on valmis käytettäväksi.	4. Le hub est prêt.	4. Ο δίκος είναι έτοιμος για χρήση.	4. Hub je spreman.	4. Hub készen áll.	4. L'hub è pronto.	4. De hub is klaar.	4. Hub jest gotowy.		

RU	SK	SWE	TR	BG	CN
1. Включить компьютер.	1. Zapnite počítač.	1. Starta datorn.	1. Bilgisayarı açın.	1. Включете компютъра.	1. 打开电脑。
2. Подключите концентратор к USB-разъёму вашего компьютера.	2. Pripojte hub k USB portu PC.	2. Anslut hubben till datorns USB-port.	2. Çoklayıcıyı USB bağlantı noktasına bağlayın.	2. Свържете хъба към USB порта на компютъра.	2. 将集线器链接到个人计算机（PC）USB端口。
3. Происходит автоматическая установка. Не требуется никаких внешних драйверов.	3. Prebehne automatická inštalácia. Nie sú potrebné žiadne externé ovládače.	3. Automatisk installation sker. Inga drivrutiner behövers installeras.	3. Kurulum otomatik olarak başlayacaktır. Herhangi bir harici sürücü kurmanıza gerek yok.	3. Протича автоматична инсталиране. Няма нужда от никакви външни драйвери.	3. 此时将执行自动安装。这一过程中无需安装任何外部驱动程序。
4. Концентратор готов к работе.	4. Hub je pripravený.	4. Hubben är klar.	4. Çoklayıcı hazır.	4. USB хъба е готов.	4. 集线器（hub）已经准备好了。

TECHNICAL SPECIFICATIONS
<b>INPUT INTERFACE</b> <b>USB 3.2 Gen 1 (USB 3.0) • USB 2.0</b> <b>5000 • 480 • 12 • 1.5 Mbit/s</b> (Super • High • Full • Low Speed) <b>USB Type C male</b> connector <b>20 cm FIXED USB CABLE</b>
<b>OUTPUT INTERFACE</b> <b>4 USB 3.2 Gen 1 ports with USB Type A female connectors</b>
<b>POWER SUPPLY</b> <b>power up to 1.5 Amp CHARGING on USB ports</b> <b>power through USB bus</b>
<b>OTHER FEATURES</b> <b>APPLE CHARGING supported</b> <b>Over Current Protection</b> <b>up to 3 external disks can be connected at the same time</b> <b>AUTOMATIC INSTALLATION</b> <b>Plug &amp; Play • Hot Plug</b>
<b>LED INDICATION</b> <b>the LED indicates the connection of the hub to the power supply</b>
<b>OS SUPPORTED</b> <b>WINDOWS</b> XP • Vista • 7 • 8 • 8.1 • 10 & later Server 2008 • 2012 • 2016 & later 32 & 64bit versions supported <b>OS X</b> 10.x & later <b>Linux</b> 2.6.x & later



© 2020 AXAGON  
Výrobce / Manufacturer: RealIQ s.r.o. - Železná 5, 619 00 Brno, Czech Republic  
All rights reserved. All text and pictorial materials contained in this document are protected by Copyright Act.  
All marks indicated here are the registered trademarks of their appropriate owners.  
Specifications are subject to change without prior notice.  
Made in CHINA for Axagon.



